


Castellated Slat Wall Installation Guidelines


Section	Item No.	Purpose
	CCS01 CCS02	Wall Cladding
	CCS05	F-Trim, used as the first and last board
	CCS06	Outside Corner Trim, used on the outside corners
	CCS10.01	Used at every joist to fix each board to the joist
	CCS10.04	Aluminium support for face fixing when finishing at the inside corner
	CCS10.02	Used for fixing joist
	CCS10.03	Used for fixing: CCS10.01 CCS10.04

Guardian™

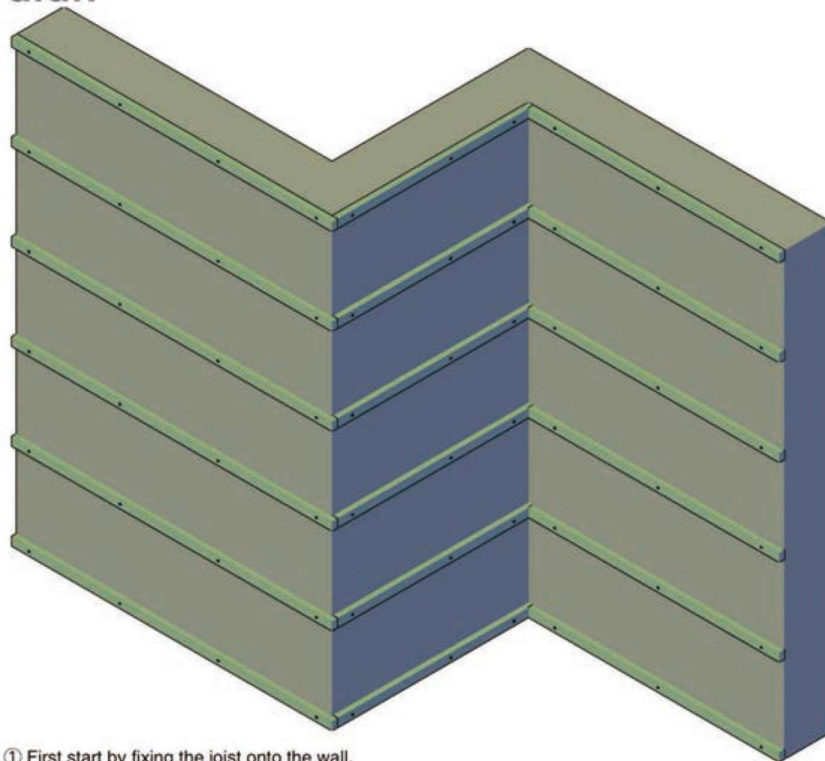


① First start by fixing the joist onto the wall.

Guardian™

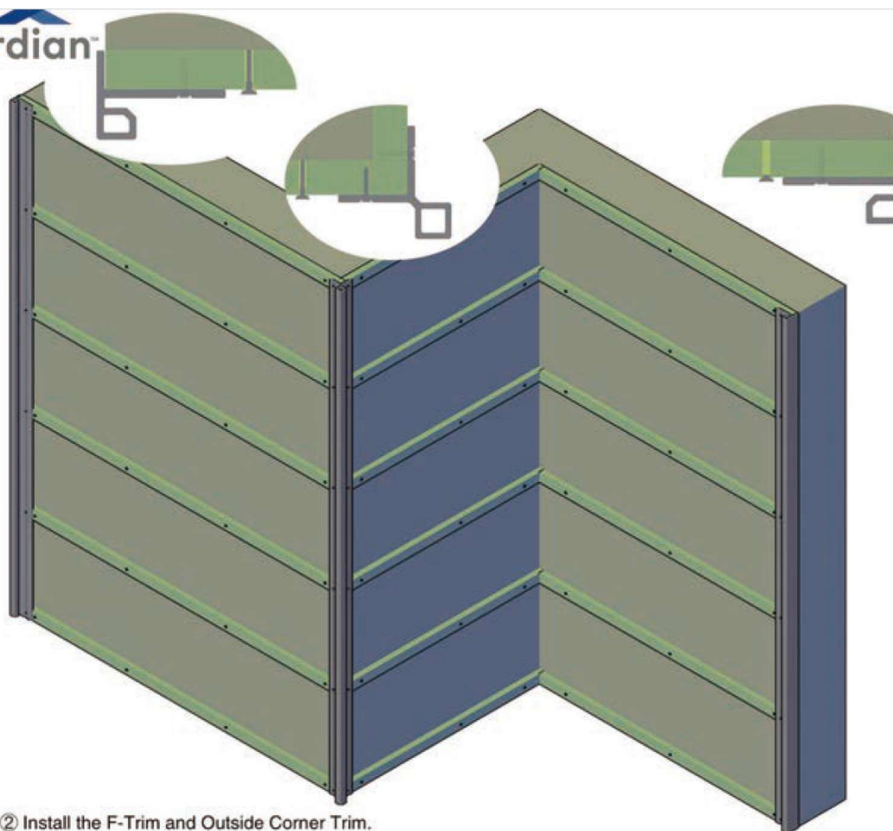


② Install the F-Trim and Outside Corner Trim.

Guardian™

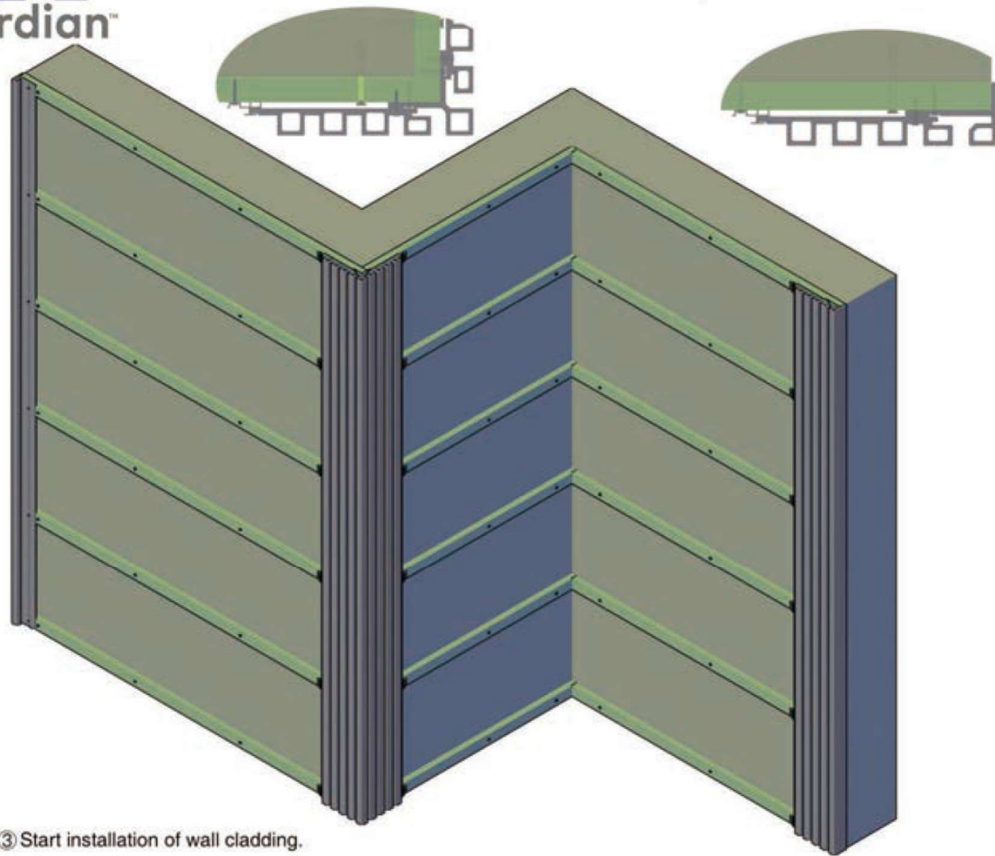


③ Start installation of wall cladding.


Guardian™

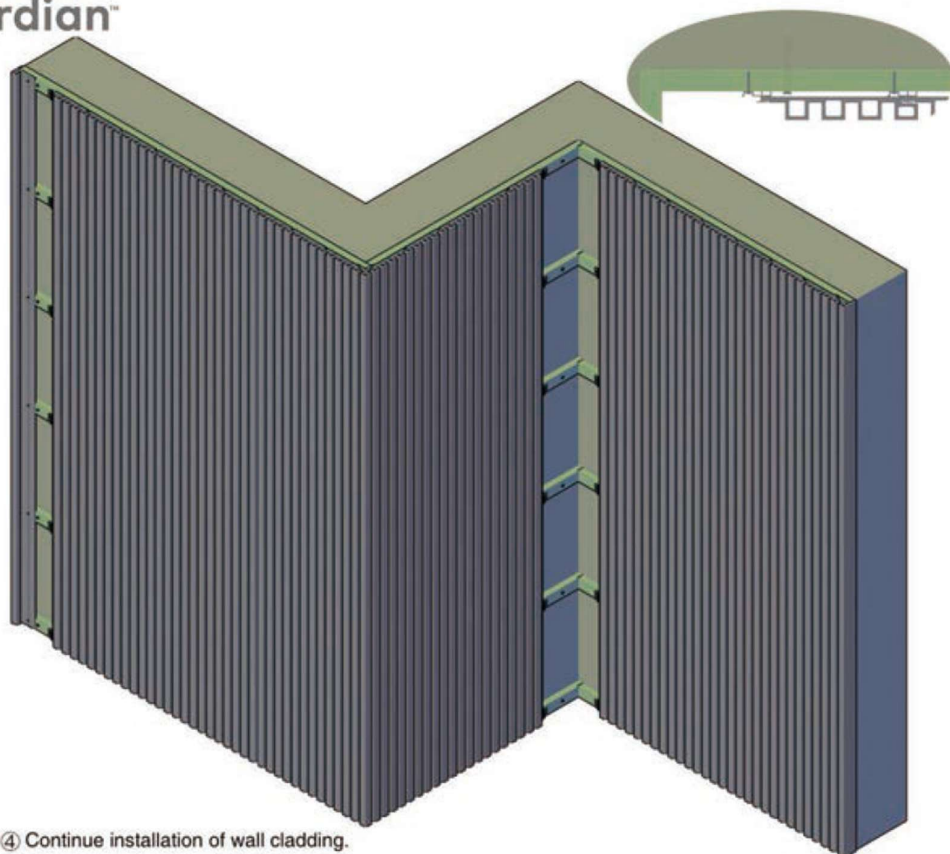


④ Continue installation of wall cladding.

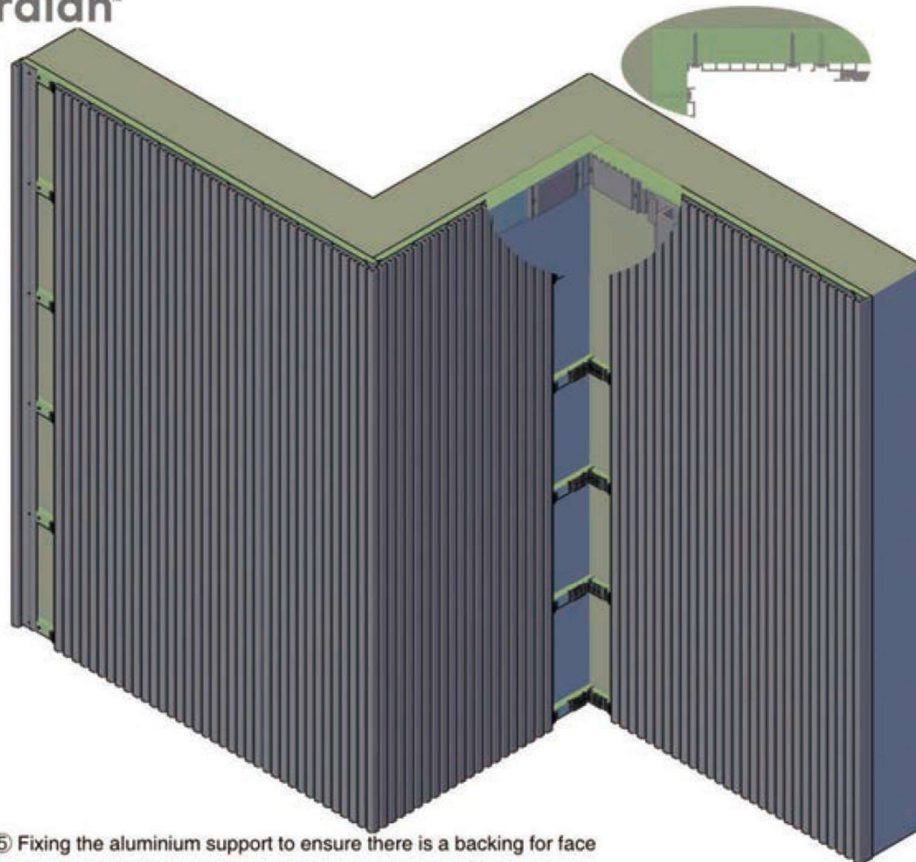


⑤ Fixing the aluminium support to ensure there is a backing for face fixing when finishing the wall cladding at the inside corner.

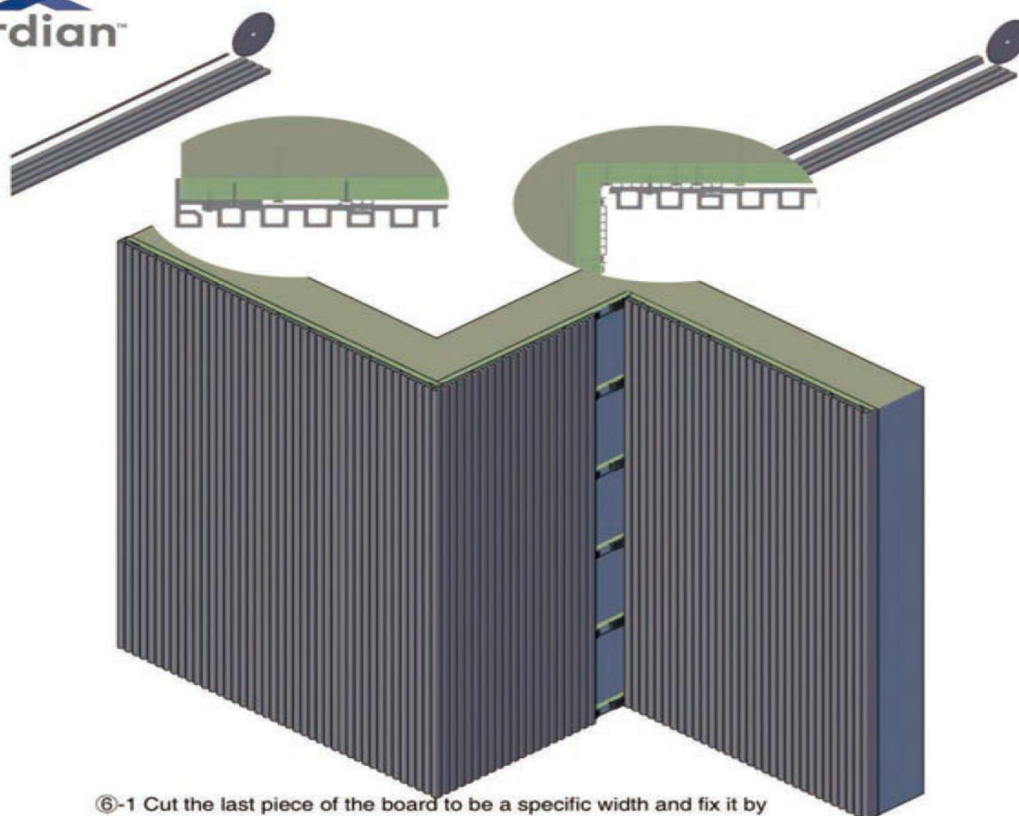

⑥-1 Cut the last piece of the board to be a specific width and fix it by screw-in to the predrilled hole.

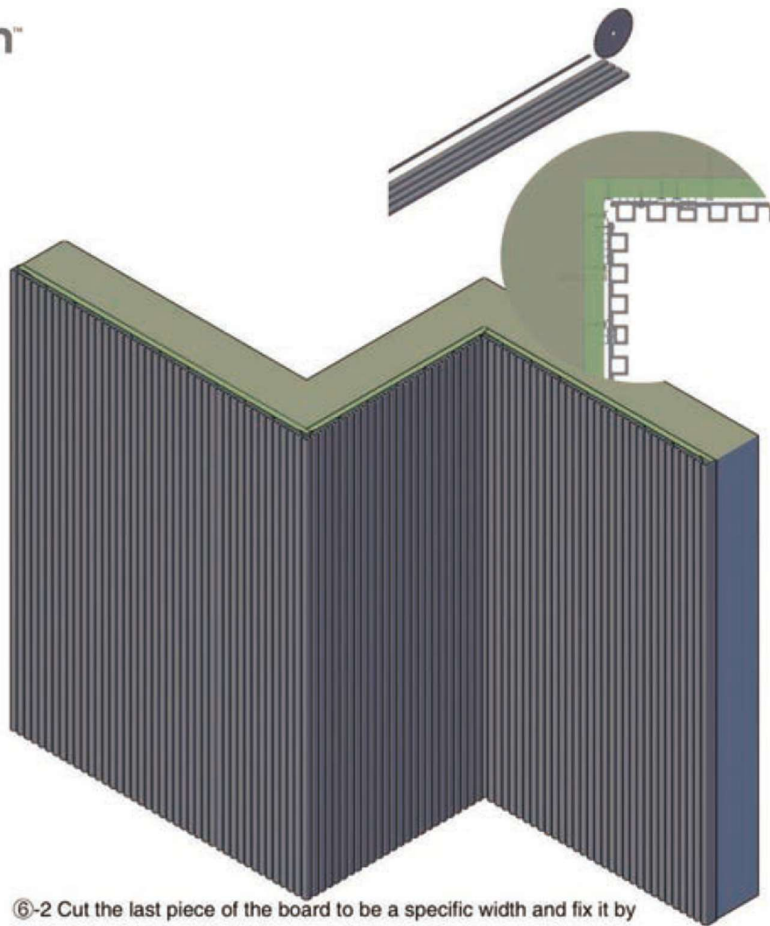

⑥-2 Cut the last piece of the board to be a specific width and fix it by screw-in to the predrilled hole.

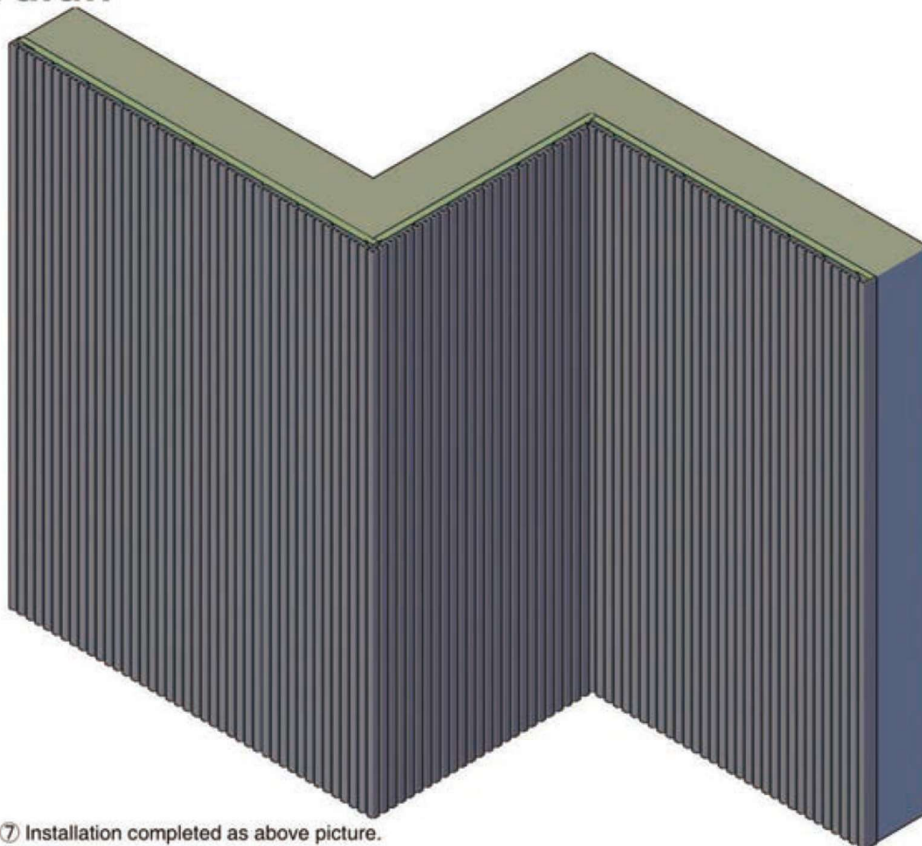

⑦ Installation completed as above picture.